



Table of Contents

1. Product Information	
1.1 Specifications & Performance 1 1.2 Temperature Limits 2 1.3 Dimensions 2 1.4 Bill of Materials 3)
2. Installation 4	
2.1 Precautions 4 2.2 Warnings 5 2.3 Advantages 5 2.4 Environment & System 5 2.5 Installation Instructions 6)
3. Control & Monitoring 7	
3.1 Shift Logic for Fiber-optic Pumps 8 3.2 Fiber Optic Stroke Detection Installation 9 3.3 Calibrating D10 Amplifier for Stroke Detection 9 3.4 Conductivity Leak Detection Installation 10 3.5 Fiber Optic Leak Detection Installation 10 3.6 Calibrating D10 Amplifier for Leak Detection 11)
4. Ordering Instructions	
5. Pump Service 13	
5.1 Rebuild Kits & Parts	
6. Warranty & Accessories	





Dear valued customer.

Thank you for purchasing a White Knight PFU030 pump.

Our dedicated team designs products to meet your exacting specifications with a demonstrated commitment to quality that goes beyond mere words and fancy slogans.

Our patented designs offer a variety of size and material options to meet stringent requirements of high-pressure chemical delivery systems, hightemperature re-circulation processes, chemical reclaim and bulk transport applications, slurry systems, and more. Our safe, reliable products offer superior performance, optimized efficiency, and simplified maintenance.

White Knight is able to provide the highest quality fluid handling products through controlled, consistent in-house engineering and manufacturing. Through continued significant investments in engineering and manufacturing, we lead the industry with new technologies and products.

White Knight has received numerous awards for innovation and manufacturing programs. We rigorously manage our quality assurance processes to ensure consistency and reliability. Our quality controls include strict cleanliness procedures and consistent manufacturing processes. For example, high-purity product assembly, testing, and packaging is performed in a Class 100 cleanroom.

Please peruse this manual before installing your White Knight product. It details installation requirements and setup instructions, and provides additional information and accessories for enhanced functionality.

Our team has gone to great lengths to ensure our products serve your needs and meet your requirements.

Further, we provide the highest quality products at the best value, and we back them up with excellent warranties and world class support.

Thank you for your confidence and trust in White Knight products.

Sincerely,

Tim White, CEO White Knight Fluid Handling





1. Product Information

1.1 Specifications & Performance

Mod	del	PFU030	PFUSD030	
Max Flow Rate*		26.4 lpm (6.97 gpm)	27.4 lpm (7.2 gpm)	
	placement Cycle*	0.089 liters (0.024 gal)	0.089 liters (0.024 gal)	
Сус	les per min	315 max		
Air	Connection	1/4 in 1/4 in		
Wei	ght	5.5 kg (12.08 lb) 5.5 kg (12.08 lb)		
Suc	tion Lift*	1 m (3 ft) Flooded suction		
Pressure**		69.54 dB(a) at 100 psi 50 CPM 66.58 dB(a) at 100 psi max CPM		
Sound	Power**	()	100 psi 50 CPM	


^{*} May vary by configuration or system. Suction lift diminishes over time. Recommended installation level less than 3 ft above source. To calculate displacement, divide flow rate by CPM.

** Sound measured in accordance with ISO9614-2:1997.

Max Fluid Temperature	210°C (412°F)
Environmental Temperature	min: 0°C (32°F) max: 50°C (122°F)
Max Supply Air Pressure	7 Bar (100 psi)
Min Startup Air Pressure	1.4 bar (20 psi)
Fluid Path Materials	PTFE, PFA
Non-Fluid Path Materials	PTFE, PFA

Stroke Detection	Fiber optic with or without D10 sensor
Leak Detection	Fiber optic with or without sensor, or conductivity
Electronic Control	CPC, CPT, or custom. Call for details.


PFU030 Performance

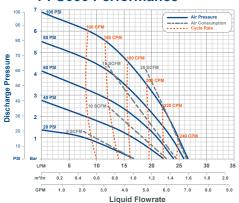

How to Read Charts

Draw a horizontal line at your discharge pressure and vertical line at desired flow rate. At line intersect, estimate required air pressure, resultant cycle rate and air consumption.

PFUSD030 Performance

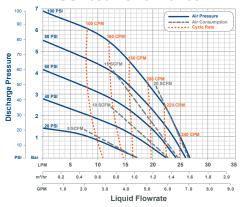

Example


At 2 Bar (30 psi) discharge pressure and 60 psi supply pressure, PFU030 pumps provide 17 lpm (4.5 gpm) liquid flow rate. They would cycle at ~175 CPM, and exhaust 12 SCFM of air.

*Graph is for reference only. Performance was measured utilizing 1/2 in (3/8 in ID) air line and 1-1/4 in (1-1/8 in ID) liquid lines with 1 ft flooded suction. Performance may vary in your system.




^{***} Dry-run capable PFUSD030 pumps require flooded suction and may have reduced warranty. Contact support for details.


1.2 Temperature Limits

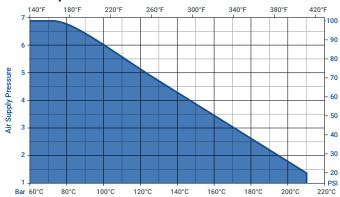


1.3 Dimensions

Dimensions in [mm] in

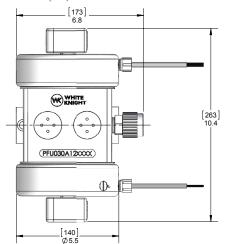

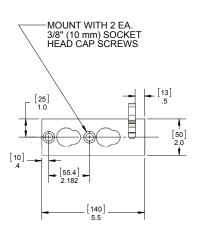

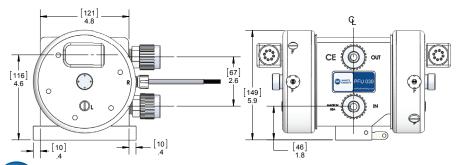




1.4 Bill of Materials

Item	Part	Description	Qnty
1	1125-TE-0020	Pump Body	1
2	2127-TE-0015	Head, Right	1
3	2127-TE-0016	Head, Left	1
4	14300-PF-0018	Bellows Assembly, Dual Probe Single Detect	2
5	14320-PF-0001	Shaft	1
6	5143-MP-0001	Seal, Shaft	2
7	8100-PF-0002	Cap, End, Single Probe Dual Detect	2
8	4142-MP-0005	Seat, Check	2
9	4135-MP-0007	Seat, Check	2
10	4140-TE-0005	Plug, Check	
11	4137-TE-0001	Cage, Check	2
12	4100-MP-0004	Ball, Check, 1/2"	4
13	10040-TE-0003	Plug, Npt, 1/4"	2 2 2 2
14	10040-TE-0006	5/8" Plug Short	2
15	7400-PF-0001	Insert, S-300®, 1/2"	2
16	7400-PF-0005	Nut, S-300®, 1/2"	2
17	7400-TE-0001	Body, S-300®, 1/2"	2
18	3200-VI-0001	Diaphragm, Ø .782	2
19	6150-UH-0001	Seat, Qev Exhaust	2
20	10080-VI-016-75	O-ring, 016 X .070	2
21	6140-FP-0002	Baffle Porous Poly QEV	4
22	6140-PP-0004	Mesh, QEV 04 & 05	6
23	4139-TE-0004	Plug, Check	2
24	10010-TE-0018	Screw, Mount, Plate, Base	2
25	14200-TE-0002	Plate, Base, Assembly	1
26	6090-UH-0003	QEH Body, 05	2
27	14700-XX-0006	Stroke Detect Fiber Optic Assembly With Wire Cutter	2
28	6150-NP-0007	Cap. Muffler, QEV	2

Fittings (Type, Size, Option)		Assemblies	Body Inlet Only (Nut not included)	
Flaretek	1/4 in.	F04	14510-PF-0016	7200-PF-0001
Compatible	3/8 in.	F06	14510-PF-0001	7200-PF-0002
0	1/2 in.	F08	14510-PF-0002	7200-PF-0003
0	3/4 in.	F12	14510-PF-0003	7200-PF-0004
Pillar S-300	1/4 in.	P04	14530-PF-0025	7400-TE-0031
COO O	3/8 in.	P06	14530-PF-0012	7400-TE-0023
100	1/2 in.	P08	14530-PF-0001	7400-TE-0001
	3/4 in.	P12	14530-PF-0002	7400-TE-0002
Synchro-	3/8 in.	S06	14520-TE-0009	7010-TE-0001
Flare	1/2 in.	S08	14520-TE-0001	7010-TE-0003
	3/4 in.	S12	14520-TE-0002	7010-TE-0002
PrimeLock	1/4 in.	L04	14570-PF-0013	7800-TE-0013
10000	3/8 in.	L06	14570-PF-0014	7800-TE-0014
0	1/2 in.	L08	14570-PF-0001	7800-TE-0001
	3/4 in.	L12	14570-PF-0002	7800-TE-0002

Fittings (7	Assemblies		
Tube Out	3/8 in.	T06	7120-PF-0001
	1/2 in.	T08	7120-PF-0002
	3/4 in.	T12	7120-PF-0003
Weldable	1/2 in.	W08	7300-PF-0001
	3/4 in.	W12	7300-PF-0002
FNPT	1/4 in.	N04	7100-TE-0001
0	3/8 in.	N06	7100-TE-0002
	1/2 in.	N08	7100-TE-0003
	3/4 in.	N12	7100-TE-0007
Plugged	Plugged		7130-TE-0001

OPTIONAL COMPONENT USE WITH SINGLE PROBE STROKE DETECT

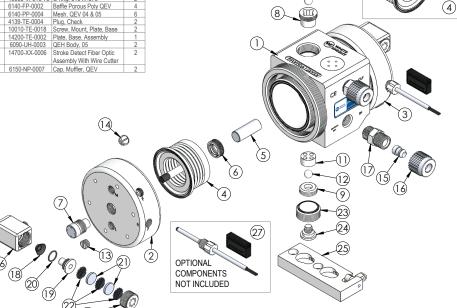

Leak Detect					
Part	Descri	ption			
14600-XX-0009	LF0	15 ft fiber optic cable with no amplifier			
14600-XX-0010	LF1	15 ft fiber optic cable with D10 amplifier			
14600-XX-0011	LF2	25 ft fiber optic cable with no amplifier			
14600-XX-0012	LF3	25 ft fiber optic cable with D10 amplifier			
14600-XX-0031	LC0	15 ft conductivity cable			
14600-XX-0040	LC1	25 ft conductivity cable			

Stroke Detect				
Part	Descri	ption		
14700-XX-0021	SFS0	15 ft fiber optic cable with no amplifier SFS0		
14700-XX-0022	SFS1	15 ft fiber optic cable with D10 amplifier SFS1		
14700-XX-0023	SFS2	25 ft fiber optic cable with no amplifier SFS2		
14700-XX-0024	SFS3	25 ft fiber optic cable with D10 amplifier SFS3		
14700-XX-0025	SFD0	15 ft fiber optic cable with no amplifier SFD0		
14700-XX-0026	SFD1	15 ft fiber optic cable with D10 amplifier SFD1		
14700-XX-0027	SFD2	25 ft fiber optic cable with no amplifier SFD2		
14700-XX-0028	SFD3	25 ft fiber optic cable with D10 amplifier SFD3		





2. Installation

2.1 Precautions

Handling

Do NOT lift pump by fiber optic cables, quick exhaust valves nor air tubing.

Installation Orientation

PFU030 pumps must be installed in an upright position. The check valves are actuated by gravity and/or flow, and they will not seat if the pump is not upright.

Timer Mode

PFU030 pumps require an end of stroke detection mechanism (pressure switch) to prevent over stroking in timer mode. Operating a PFU030 in timer mode without stroke detection will void the pump warranty.

Required Air Flow (Shuttle Valve)

PFU030 pumps require 1/4 in minimum orifice with unrestricted air flow.

Required Air Flow (Solenoid Valve)

PFU030 pumps require a 0.75 Cv solenoid. Using a reduced Cv will reduce flow rates. Using a valve with more than 20% greater Cv will change operating parameters, reduce pump life and void the warranty.

Under Supply of Air

PFU030 pumps operate erratically or stall when air supply is insufficient. Ensure use of air supply pressures higher than averaged air consumption lines in performance charts. Air supply lines and fittings must meet minimal inner diameter requirements shown in the installation instructions

Air Supply Pressure

Operating PFU030 pumps ~35% below max air pressure may significantly extend pump life. PFU030 pumps require 20 psi minimum air pressure. Operation above 7 Bar (100 psi) may damage the pump and void the warranty.

Suction Lift

PFU030 pumps have an initial suction lift capacity of 3 ft. For best results minimize suction lift.

Liquid Inlet/Outlet Connections

PFU030 liquid ports are not NPT nor any other standard. Use of connectors other than those supplied by White Knight will damage the pump and void the warranty.

Liquid Line Restriction

PFU030 pumps may be controlled by closing liquid outlet lines. However, restricting liquid supply lines increases wear and should be avoided. Do NOT pump against a closed liquid inlet. It will damage the pump and void the warranty.

Running Dry

PFU030 pumps use the pumped liquid to lubricate their shafts. The pumps will cycle faster and wear more than normal when run dry, which may cause damage and loss of self-prime abilities. Standard models should not be run dry after start-up and are not warrantied under dry run conditions. Dry-run capable PFUSD030 models may run dry for short periods. Warranty of dry-run models is one-year. Extended warranties are available.

Pulse Dampener with Shuttle Valve

Air supply pressure to PFU030 pumps should be at least ten psi higher than the liquid line pressure when using a pulsation dampener. Failure to do so may cause erratic operation.

Cross Contamination

PFU030 pumps use porous material that may retain chemicals. Take precautions to avoid cross contamination.





2.2 Warnings

Pressurized Material



Pumps in use contain pressurized materials. Eliminate liquid and air pressure via shut off valves before pump is serviced or removed from the system.

High Temperature



Heat may transfer to exterior surfaces when pumps operate with high temperature fluids. Avoid direct contact with the pump when high temperature fluids are present.

Hazardous Chemical



Use appropriate personal protective equipment when handling pump. Reference Material Safety Data Sheet (MSDS) for information specific to your chemicals.

Loud Noise



Pump exhaust air contributes to work area noise levels. Only operate pumps with approved muffler media, and use ear protection in noisy conditions.

2.3 Advantages

Head Pressure / Dead-Head

PFU030 pumps can be controlled by adjusting their liquid outlet pressures and can be installed with head pressures up to dead-head (e.g. equal liquid and air pressures) with no damage to the pump.

Thermal Cycling

PFU030 pumps require no maintenance when operated within their performance range, even in thermal cycling applications.

2.4 Environment & System

Oversized Inlet Line

Pumps operate optimally with liquid inlet lines larger than the liquid outlet lines. This reduces strain on the bellows and may reduce pulsation in the pump outlet.

Clean Supply Air (CDA)

PFU030 pumps require use of Class 2 air for particles and moisture per ISO 8573-1. Use 10 micron filter; maintain -40°C dew point. A point-of-use filter is recommended during first six months of operation in new fabs/systems due to high risks of debris that can damage pumps and void warranty.

Flammable Solvents

PFU030 pumps are not constructed from conductive materials. System that pump flammable solvents should be properly grounded to avoid ignition by static charge. A River's Edge test of isolative pumps with flammable liquids indicated that liquids must be grounded and other procedures should be followed. Copy of test available.

Pumping Liquids Near Boiling Point

Minimizing suction lift reduces pulsation and the potential for boiling or outgassing of liquid in the inlet of the pump. Although reciprocating pumps can pull suction lift, pump performance and life increase when suction lift is minimized or eliminated.

Abrasive Slurry

Pumping abrasive slurry may accelerate wear of components. PFU030 pumps are warrantied when used with slurry. However, normal wear is not covered by warranty.

Environmental Temperature

PFU030 pumps are rated for 0°C (32°F) - 50°C (122°F) environmental temperatures. Do not freeze fluid in pump. Operation below 0°C may accelerate wear. Normal wear is not covered by warranty.



D10 amplifier must be calibrated before attaching fiber optic probes to the pump.

2.5 Installation Instructions



Set lever to up position. Slide base plate forward or pump body backward.



Lift pump off of base plate.



Pull-back dismount is standard. See steps 3.1-3.3 for forward dismount.

Screw base plate to surface with 3/8 in or 10 mm head cap socket screws into predrilled holes.



Set pump on base knobs: slide it forward. Set lever to down position.



Insert fiber-optics fully into heads. Push in ferrule and gripper; hand-tighten nut.



Attach fittinas to pump. Tighten to 20 inch-lbs.



Attach tubes and fittings per manufacturer instructions. Use backer wrench to hold fittings in place at pump.



in FNPT ports on quick exhaust valves. Line must be 3/16 in minimum orifice.

Push-Forward Dismount **Configuration Setup**

Replace step 4 with steps 3.1-3.3 to re-configure the base plate to pushforward dismount.



Move knobs to opposite sides.



Set pump on base knobs; slide it backward.



Move lever down to locked position.

Install with Rigid Base Plate *Requires push-forward dismount configuration (steps 3.1-3.3)



Remove L bracket. Set lever in neutral (up) position.



Slide pump forward; lift it off base plate.



Fix base plate to work station. See step 4 above.

Return

pump to

base plate.

Move lock lever to down position.

Reattach L bracket. Tighten to 12 in-lb.

Liquid Inlet/Outlet

Liquid ports are not NPT nor any other standard. Use of connectors other than those supplied by White Knight will damage the pump.





3. Control & Monitoring


Programmable Control

White Knight CPT-1 controllers monitor and adjust run mode, flow rate, leak detection and other pump operations.




D10 Amplifier Electrical Hookups & Dimensions

White Knight recommends Expert™ D10 amplifier for use with fiber optic stroke and leak detection assemblies.

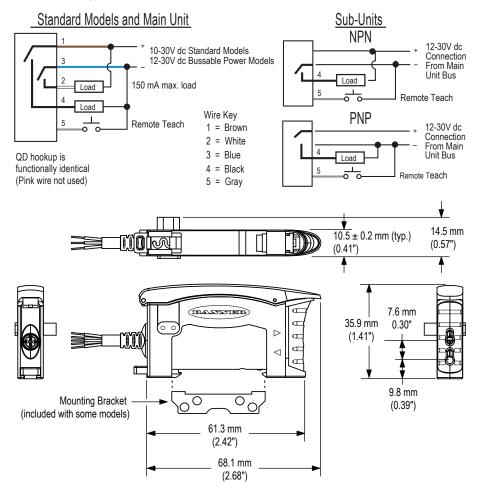


3.1 Shift Logic for Fiber-optic Pumps

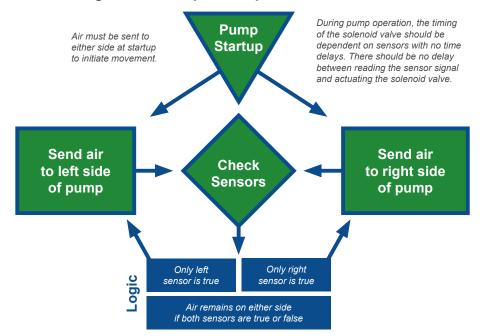



3.2 Fiber Optic Stroke Detection Installation

 For standard end stroke, follow steps for both sides of the pump. For single-probe dual-detect, follow steps for only the left side.



Insert fiber optic probes fully into heads. Push in ferrule and gripper; hand-tighten nut.



Open the top and slide the front face of the D10 up. Press the fiber optic ends into the holes on its front. Slide the face down to lock cables in place.

3.3 Calibrating D10 Amplifier for Stroke Detection

When calibrating the D10 Amplifier for stroke detection, the pump should be in the same operating conditions it will be in during normal operation (i.e. supply air pressure, back pressure, etc.). The Fiber Optic must be installed as per the instructions in section 3.1.

Calibration:				
	Push Button	Remote Line	Result	
Access Dynamic TEACH Mode	Press and hold dynamic push button >2 seconds.	Hold Remote line low (to ground) >2 Seconds.	Power LED: OFF Output LED: OFF Bar graph: LO & DO Alternately Flashing	
TEACH Sensing Conditions	• Hold push button. • Operate pump normally for 15 seconds.	Hold remote line low (to ground). Operate pump normally for 15 seconds.	Power LED: OFF Output LED: OFF Bar graph: LO & DO Alternately Flashing	
Return to	Release button	Release remote line/switch	Teach Accepted Power LED: ON Bar graph: One LED flashes to show relative contrast (successful setup requires minimum value of 4). Sensor returns to Run Mode with new settings.	
Run Mode			Teach Unaccepted Power LED: OFF Bar graph: #1, 3, 5, 7 alternately flash to show failure to sense. Sensor returns to Run mode without changing settings. Set up again if value shows <4.	

Upon completion of a successful learning cycle, the D10 Amplifier will continuously learn and self-teach to maintain the same cycle rate count readings.

3.4 Conductivity Leak Detection Installation


Leaks are identified if conductive fluid contacts a sensor. Sensor provides a Sink (NPN) or Source (PNP) signal, depending on the wire setup. See the wiring diagrams below.

Conductive leak detection does not qualify for use in explosion-proof environments. Conductive fluid required.



Remove leak adapter from assembly.

Replace NPT plug in "L" port with probe. Hand Tighten. Attach cable to signal translator (e.g. PLC).

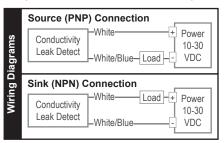


3.5 Fiber Optic Leak Detection Installation

D10 amplifier must be calibrated before attaching fiber optic probes to the pump. Fiber optic sensors can melt if used at >130°C (266°F), causing leak detect failure.


See below for elbow out configuration.



 
Remove leak adapter and leak detect probe from fiber optic assembly.



 Lower ferrule and gripper until snug against the probe. Hand tighten female gripper nut.



 For straight out configuration replace NPT plug in "L" port with the probe. Hand-tighten.



Insert the fiber optic cable until it contacts the bottom of the probe.





 
Open the top and slide the front face of the D10 up. Press the fiber optic ends into the holes on its front. Slide the face down to lock cables in place.





Replace NPT plug in "L" port with elbow adapter.

Conductivity Fiber optic



Attach fiber optic or conductivity leak detect probe per instructions above.

1.1

1.2

3.6 Calibrating D10 Amplifier for Leak Detection

Step 1: F	Step 1: Power On D10 Amplifier & Set "Dark Operate" Mode:					
	Push Button	Remote Line	Result			
	0.04 s ≤ "Click" ≤ 0.8 s	$0.04 \text{ s} \le T \le 0.8 \text{ s}$				
Access Setup Mode	Press and hold both buttons > 2 seconds.	Double-pulse remote line	Green Power LED turns OFF. Output LED remains active. Icons continue to display current setup. Bargraph turns OFF.			
Select Settings	Press either button until LEDs show desired settings.	Pulse the remote line until LEDs show desired settings. Tote: Double-pulsing remote line causes setting to "back up" one step.	Sensor toggles through these setting combinations: LO - Normal Speed - No Delay (default) DO - Normal Speed - No Delay LO - High Speed - No Delay DO - High Speed - No Delay LO - Normal Speed - Delay DO - Normal Speed - Delay LO - High Speed - Delay DO - High Speed - Delay DO - High Speed - Delay DO - High Speed - Delay			
Return to Run Mode	Press and hold both buttons >2 seconds.	Hold remote line low > 2 seconds. > 2 seconds	Green Power LED turns ON. Sensor returns to Run mode with new settings.			

Step 2: Access "Single-Point Dark Set" Mode					
	Push Button	Remote Line	Result		
	0.04 s ≤ "Click" ≤ 0.8 s	$0.04 \text{ s} \le T \le 0.8 \text{ s}$			
Access Set Mode	Press and hold static button > 2 seconds.	Single-pulse remote line	Power LED: OFF. Output LED: ON (push button) OFF (remote line) Static LEDs: LO & DO alternately flashing		

Step 3: Set Sensing Condition

Set condition to "leak detection" sensing while probe tip is submerged in liquid. Then, remove the leak probe from liquid and reinserted into the "L" port. Amplifier will now signal when moisture if detected on the probe tip.

	Push Button	Remote Line	Result	
	0.04 s ≤ "Click" ≤ 0.8 s	$0.04 \text{ s} \le T \le 0.8 \text{ s}$		
g Condition	Present sensing condition Five-click static button	Present sensing condition • Five-pulse remote lne	Power LED: ON. Output LED: ON (push button) OFF (remote line) Bargraph: 4 indicators flash. Sensor returns to Run mode with new sett	or Grand
Set Sensing	- +		Power LED: ON. Output LED: ON (push button) OFF (remote line) Bargraph: #1, 3, 5, 7 flash for failure. Sensor returns to Set sensing condition.	5 0 0 X





4. Ordering Instructions

Required (Default Model) Additional Options (Blank if not needed)

PFU030 - LF0 - SFD0 - TF08 Rev



Options 1-3 are required. Leave Additional Options blank if not desired. Only add Outlet if different than Inlet

Default options are highlighted

1. Pump Model				
Standard	PFU030			
Dry-Run	PFUSD030			

2. Check Ball Material			
PTFE Check balls	blank		
PFA Check balls	F		

2. Check Ball Material			
PTFE Check balls	blank		
PFA Check balls	F		

3. Inlet Fitting Front straight only					
Flaretek	1/4 in.	F04			
Compatible	3/8 in.	F06			
1	1/2 in.	F08			
0	3/4 in.	F12			
Tube Out	3/8 in.	T06			
	1/2 in.	T08			
	3/4 in.	T12			
Weldable	1/2 in.	W08			
	3/4 in.	W12			
Pillar S-300	1/4 in.	P04			
0000	3/8 in.	P06			
	1/2 in.	P08			
	3/4 in.	P12			
FNPT	1/4 in.	N04			
	3/8 in.	N06			
	1/2 in.	N08			
	3/4 in.	N12			
Synchro-	3/8 in.	S06			
Flare	1/2 in.	S08			
0	3/4 in.	S12			
PrimeLock	1/4 in.	L04			
To an	3/8 in.	L06			
THINGEOK	1/2 in.	L08			
	3/4 in.	L12			

4. Leak Detection	
No leak detection	blank
15 ft fiber optic cable with no amplifier	LF0
15 ft fiber optic cable with D10 amplifier	LF1
25 ft fiber optic cable with no amplifier	LF2
25 ft fiber optic cable with D10 amplifier	LF3
15 ft conductivity cable	LC0
25 ft conductivity cable	LC1

5. Stroke Detection		
No stroke detection	blank	
DUAL PROBE OPTIONS		
15 ft fiber optic cable with no amplifier	SFD0	
15 ft fiber optic cable with D10 amplifier	SFD1	
25 ft fiber optic cable with no amplifier	SFD2	
25 ft fiber optic cable with D10 amplifier	SFD3	
SINGLE PROBE, DUAL DETECT OPTIONS		
Single probe, dual detect, no fibers	SFS	
15 ft fiber optic cable with no amplifier	SFS0	
15 ft fiber optic cable with D10 amplifier	SFS1	
25 ft fiber optic cable with no amplifier	SFS2	
25 ft fiber optic cable with D10 amplifier	SFS3	

^{*} Fiber optic cables ordered separately. Fiber optics are required for operation. Standard configuration includes dual probe WITHOUT fibers. See stroke detection options to order fiber optic cables or single probe option.



Timer mode operation requires end-of-stroke detection. Use of timer mode without stroke detection voids the warranty.

Operating the pump without the included quick exhaust valves (QEVs) voids pump warranty. Customers may use their own QEVs with the optional NPT adapter.

6. Outlet F Straight onl Select Top	Front	Тор	
Same as Inlet		blank	n/a
Flaretek	1/4 in.	FF04	TF04
Compatible	3/8 in.	FF06	TF06
	1/2 in.	FF08	TF08
0	3/4 in.	FF12	TF12
Tube Out	3/8 in.	FT06	TT06
	1/2 in.	FT08	TT08
-	3/4 in.	FT12	TT12
Weldable	1/2 in.	FW08	TW08
	3/4 in.	FW12	TW12
Pillar S-300	1/4 in.	FP04	TP04
0000	3/8 in.	FP06	TP06
00	1/2 in.	FP08	TP08
	3/4 in.	FP12	TP12
FNPT	1/4 in.	FN04	TN04
	3/8 in.	FN06	TN06
	1/2 in.	FN08	TN08
	3/4 in.	FN12	TN12
Synchro-	3/8 in.	FS06	TS06
Flare	1/2 in.	FS08	TS08
0	3/4 in.	FS12	TS12
PrimeLock	1/4 in.	FL04	TL04
To a	3/8 in.	FL06	TL06
10000	1/2 in.	FL08	TL08
	3/4 in.	FL12	TL12

-	ev	13	ıv	<i>7</i> 11

No revision

blank

Contact support for revision level or copy exact code activation details. Configured part numbers are not Copy Exact Part Numbers. support@wkfluidhandling.com





5. Pump Service

Pumps fully rebuilt by White Knight, certified rebuilders, or technicians certified by White Knight receive full warranty renewal. Details below.

White Knight Rebuilds

Request factory rebuilds by web form at: https://wkfluidhandling.com/support/rma/. An RMA# will be provided after processing.

*Customers must follow decontamination instructions in Section 4.4 when returning a pump to White Knight.

Certified Rebuilders


White Knight's global network of certified rebuilders expedite rebuild turn-around time and minimize shipping costs. Find certified rebuilders at: https://wkfluidhandling.com/rebuilders/

Rebuild Pump as Certified Technician

White Knight offers trainings to certify technicians to rebuild pumps. Technicians who pass the training are issued a two-year certification. During the two years, parts in pumps rebuilt by the technician receive a full warranty. See: https://wkfluidhandling.com/virtual-rebuilds/

5.1 Rebuild Kits & Parts

Rebuild kit for PFU030 is RBPFU030-1. Rebuild kit for PFUSD030 is RBPFUSD030-1 (labor not included). To request rebuilds by White Knight, use RBPFU030-5 or RBPFUSD030-5, respectively (labor included).

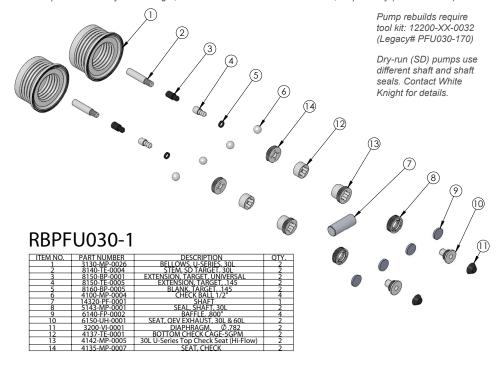



5.2 Return Pump for Service

Follow decontamination instructions when returning a pump for service.

DO NOT REMOVE PAGE FROM MANUAL.

Copy page from manual or download at https://wkfluidhandling.com/support/rma/.

Decontamination Instructions

PRINT COMPLETED DECONTAMINATION CERTIFICATION. IT MUST BE INCLUDED IN YOUR RMA SHIPMENT.

White Knight products are designed for use with caustic and otherwise dangerous liquids. Handle every product as if it contains dangerous chemicals whether or not it actually does.

- Only those with adequate safety training should attempt to handle used pumps.
- · Wear adequate safety gear appropriate for chemicals that have been in the pump.
- · Review relevant Material Safety Data Sheets (MSDS) before handling the pump.
- · Review emergency numbers for use in event of an accident.
- Prepare Ph papers, showers, antidotes, clean-up equipment, neutralizers, and other safety devices used to detect, neutralize or minimize effects of chemicals described in appropriate MSDS documents.

Rinse with DI Water

Circulate DI water through pump for twenty minutes before disassembly and/or double bagging for shipment. If pump is nonfunctional, force DI water from inlet through outlet for 40 minutes before shipment preparations.

Remove Pump from Station:

- Disconnect liquid tubing connectors from front of pump (opposite shuttle valve).
- Plug NPT fittings with PTFE plug, Flare fittings with flare nose cover and cap, or other plug or cap as recommended by connector supplier.
- 3. Disconnect air supply tubing from face of shuttle valve.
- 4. Loosen mount screw from base plate. (Note: do not remove screw from base plate).
- Remove base plate using proper tool for the fastening devices (e.g. Allen wrench or screw driver).
 Note: Base plate may stay if needed for replacement pump to be used.
- 6. Return all removed parts to the pump.

Return Pump to White Knight:

- 1. Rinse pump with DI water as described above after removing it from its station.
- 2. Drain remaining DI water from the pump inlet and outlet liquid tubing connectors.
- 3. Plug liquid outlets as described in the Remove Pump from Station section above.
- 4. Dry the pump, double bag it, and seal it in thick polyethylene bags.
- 5. Return the pump to its original packaging.
- 6. Include MSDS for the chemical that the pump was handling in the box with the pump.
- 7. Obtain RMA number from White Knight and write it on the outside of the box.
- 8. Ship to White Knight following all rules, regulations and laws regarding shipment of dangerous materials. Ship freight pre-paid. No collect shipments will be accepted. Unauthorized use of White Knight shipping accounts will result in the adding of freight to the bill in addition to a service charge.

Include All Pump Components:

Pumps returned to White Knight for evaluation, service or repair must be complete with all components, including but not limited to base plate, mount screws, tubing connectors, tubing connector caps, flare noses, shuttle valves, mufflers, and tubing. Missing parts will be added to the pump and charged to the customer.



DO NOT REMOVE PAGE FROM MANUAL.

Copy page from manual or download at https://wkfluidhandling.com/support/rma/.

Decontamination Certification

COMPLETE AND	PRINT THIS FORM. IT MUS	T BE INCLU	JDED IN YO	JR RMA SHIPMEN	IT.		
decontaminatio	ed employee of n and safety procedures or return of product belo		d in Decon	tamination Instr		tify that all tion have	
RMA#:							
(We cannot proce	ss returns without an RMA n	number.)					
Serial#:(We cannot proces	ss returns without a product	serial numl	ber.)				
Metal Expo	SURE: oly. Write in other metals if n	necessary.)					
Product was	used in a Metal Proces	s. 🗖 Ye	es 🗖 No				
Product was	used in a <u>Copper</u> Meta	l Process.	■ Yes	■ No			
Product was	used with:						
■ Aluminum ■ Tungsten	□ Cobalt □ Gold □ Zinc □ Other: _	Lead	■Nickel	Platinum	■Silver	■Tin	Titanium
Chemical E	xposure: oly. Write in other chemicals	if necessar	y.)				
☐ Product was	NOT used in chemicals	(DI Wate	r only).				
☐ Product was	used in chemicals.						
□ Ammonia□ Nitric Acid	☐ Ammonium Hydroxide ☐ Phosphoric Acid	□Hydrod □Sulfuri	chloric Acid c Acid	■Hydrofluoric A ■ Other:		lrogen Perc	oxide 🗖 IPA
	formation: metal processes to which side of the return package			een exposed by	clearly and	d conspic	uously
	sed to Metal Processe o the following addres			NOT exposed sent to the follo			;
White Knight Fluid Handling 187 East 670 South, Suite B Kamas, UT 84036				ght Fluid Handli 670 South, Suite T 84036			
Print Name:							
Signature:					Date		





6. Warranty

White Knight follows strict manufacturing, assembly and testing procedures to ensure consistency and reliability.

White Knight warrants PFU030 pumps and components are free from defects in materials and workmanship for two years from our shipment date or your installation date if provided within 90 days of shipment from our facility.

Failures due to normal wear, misuse, abuse or unauthorized disassembly nullify this warranty.

White Knight does not guarantee the suitability of products for specific applications. White Knight is not liable for any damage or expense resulting from use or misuse of its products in any application. Responsibility is limited solely to repair or replacement of defective products or components.

Prior written, faxed or emailed approval must be obtained from White Knight before returning any product or component for warranty consideration. All determinations regarding cause of failure are made by White Knight, and all decisions regarding warranty fulfillment or nullification are made by White Knight.

THE FOREGOING WARRANTY IS EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES EXPRESSED OR IMPLIED, INCLUDING ANY GUARANTEE OF SUITABILITY FOR ANY PURPOSE. NO VARIATIONS OF THIS WARRANTY SHALL BE HONORED NOR CONSIDERED LEGALLY BINDING, EXCEPT WRITTEN AGREEMENTS SIGNED BY THE CEO OF WHITE KNIGHT FLUID HANDLING.

Tim White, CEO White Knight Fluid Handling

Accessories

See ordering instructions or contact us for details.

Stroke Detection

- Fiber Optic stroke detection with or without sensor
- · Solid state pressure switch
- · Solid state dual pressure switch

Leak Detection

- Fiber Optic leak detection with or without sensor
- · Conductivity leak detection

CPT-1

· Control/monitor run mode and flow rate.

Catcher™ Pre-Filters

- · In-line and pump-mounted options
- · Large through holes to avoid loading
- Filter may be removed without removing the Catcher™ from the pump or the line.
- Pumps damaged by passing solids that use a Catcher™ are repaired as in warranty.

Filter Housing

- 100% non-metallic
- Allows for filter changing without disconnecting the inlet/outlet lines
- · Rated for temperatures up to 210°C
- Install with industry standard connections
- Designed to allow for thermal cycling
- Upright and inverted installation options

Quick Exhaust Valves

- Allows for immediate escape of exhaust air reducing pulsation and exposure of solenoid valve to corrosive fumes
- · In-line and pump-mounted options
- UHMW-PE design
- Comes standard with a one-year warranty

Pulse Dampeners

- Uses same CDA as supplied to pump
- · In-line and pump-mounted options
- Sizes available for all PFU Series pumps
- Self-adjusting, Auto-Level Valve is regulated by liquid line pressure







CERTIFICATE & DECLARATION OF CONFORMITY FOR CE MARKING

Company contact details:

White Knight Fluid Handling Inc. 187 E. 670 S., Kamas, Utah, 84036, USA

White Knight Fluid Handling Inc. declares that their:

Bellows Pump Line

PSA030, PSA060, PSA140, PSH030, PSH060, PSH140, PSU030, PSU060, PSU140, PSA015, PSR050, PSR025, PFA030, PFA060, PFA140, PFH030, PFH060, PFH140, PFU030, PFU060, PFU140, PXA030, PXA060, PXA140, PXH030, PXH060, PXH140, PXU030, PXU060, PXU140, PFA015, LHA015, LHA030, LHA070

Diaphragm Pump Line (Non Conductive)

PSD04TE, PSD06TE, PSD08TE, PSD16TE, PSD24TE, PSD04UH, PSD06UH, PSD08UH, PSD16UH, PSD24UH, PSB100

Diaphragm Pump Line (Conductive)

PSD04TC, PSD06TC, PSD08TC, PSD16TC, PSD24TC, PSD04UC, PSD06UC, PSD08UC, PSD16UC, PSD24UC

Legacy Pump Line

PLS30, PLS60, PLS120, PLX30, PLX60, PLX120, PX30, PX60, PX120, PLF30, PLF60, PLF120

Metering Pumps PPM100, PEM100, PEM050

Plastic Pumps PHC40-2, PPMC300, PPMA

TPA07 Pressure Transducer

are classified within the following EU Directives as applicable:

Machinery Directive 2006/42/EC Low Voltage Directive 2014/35/EU Electromagnetic Compatibility Directive 2014/30/EU RoHS 2 Directive 2011/65/EU

and further conform with the following EU Harmonized Standards as applicable:

EN 809:1998+A1:2009 EN 60204-1:2006 + A1:2009 EN 61000-6-2:2005 EN 61000-6-4:2007+A1:2011

Dated: 16 January 2017

Position of signatory: Product Manager Name of Signatory: Cory Ammon Simmons Signed below: on behalf of White Knight Fluid Handling Inc.





White Knight Support

187 E. 670 S. Kamas, UT 84036

Phone: 435.783.6040 Toll Free: 888.796.2476 Fax: 435.783.6128

support@wkfluidhandling.com

https://wkfluidhandling.com/support/



