


SHC Series

Inline Chemical Heater

Item Number SHC-1.4-61RQH-R-0070

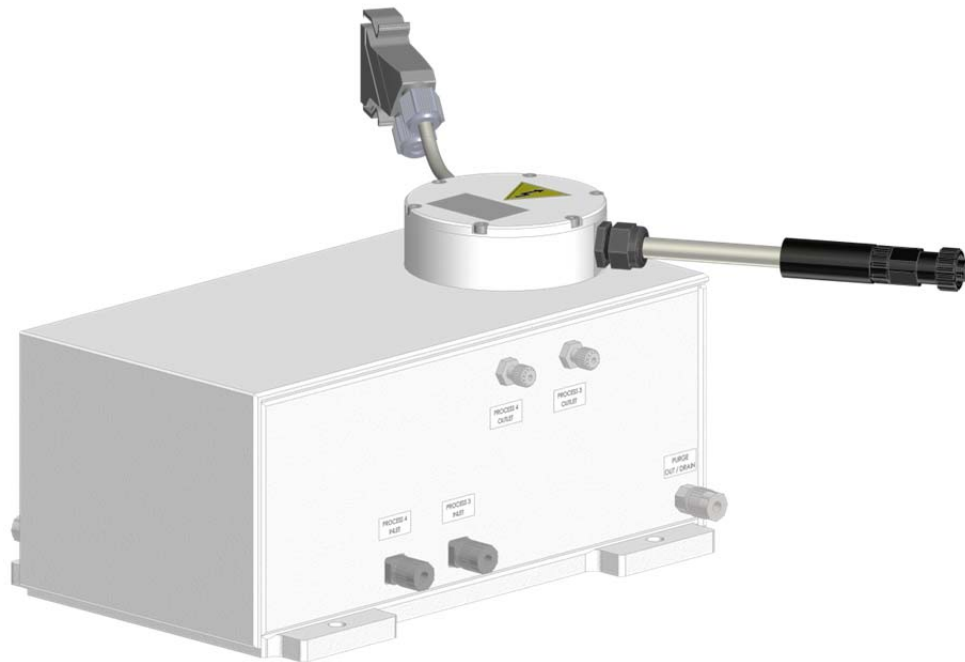

Installation Manual

Please supply your inline heater model and serial number when ordering spare parts or when requesting technical assistance.

Note: pictured heater shown with optional mounting brackets



www.processtechnology.com








7010 Lindsay Dr., Mentor, OH 44060 Phone: 440-974-1300 Fax: 440-974-9561 USA/CN: 800-621-1998

Table Of Contents

INTRODUCTION	2
CHEMICAL COMPATABILITY	4
PERFORMANCE DATA.....	5
SYSTEM SPECIFICATIONS.....	7
FACILITY REQUIREMENTS.....	8
SPACE-REQUIREMENTS.....	8
LOCATION.....	8
MOUNTING.....	9
PLUMBING-REQUIREMENTS	8
ELECTRICAL-REQUIREMENTS	10
INSTALLATION:	11
UNCRATING AND INSPECTION	11
COMPONENT IDENTIFICATION	11
PROCESS-FLUID-CONNECTIONS	12
ELECTRICAL CONNECTIONS.....	12
HEATER CORE SENSORS	13
HEATER ELEMENT TCO	13
SAFETY FEATURES	14
OPERATION	15
START UP.....	15
SHUT-DOWN.....	15
CLEANING.....	16
MAINTENANCE	16
PREVENTATIVE MAINTENANCE.....	16
SERVICE.....	17
WARRANTY.....	18

INTRODUCTION:

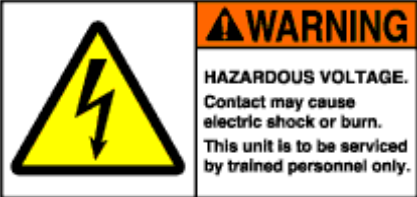
THE FOLLOWING SYMBOLS AND WARNING LABELS APPEAR ON THE UNIT AND IN THE INSTRUCTION MANUAL. THE TABLE BELOW PROVIDES AN EXPLANATION OF EACH ONE.

DESCRIPTION	PICTORIAL DESCRIPTION
<p>DANGER indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury. This signal word is to be limited to the most extreme situations.</p>	
<p>WARNING indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.</p>	
<p>CAUTION indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury. It may also be used to alert against unsafe practices.</p>	
<p>DANGER: HAZARDOUS VOLTAGE ENCLOSED Voltage or current hazard sufficient to cause shock, burn or death. Disconnect and lock out power before servicing.</p>	
<p>WARNING: HAZARDOUS VOLTAGE Contact may cause electric shock or burn. This unit to be serviced by trained personnel only.</p>	
<p>CAUTION: HOT SURFACE. DO NOT TOUCH Heater chamber may be hot. Allow unit to cool before servicing.</p>	
<p>PROTECTIVE EARTH (GROUND)</p>	

INTRODUCTION (CONTINUED):

The SHC heater by Process Technology is designed to safely heat process chemistries through indirect contact instead of direct immersion. The wetted surfaces are constructed of high purity PFA for non-metallic equipment requirements and the heater can be used in either single pass or multi-pass (recirculating) flow applications.

The SHC inline heater can withstand operation at a variety of temperature and pressure conditions. The maximum operating condition for the SHC inline heater is 80°C at 40 PSI.


	Safe operation of this heater requires the use of the core sensor(s) with an appropriate thermostatically controlled device. Operating in excess of the maximum operating temperature (80°C) can result in conditions that can cause harm to operators and equipment.
---	--

The Standard Process Technology SHC Series Heater consists of:

- * *PFA fluid path*
- * *Grounded heating element (resistive style)*
- * *0.5 meters (20in) PVC covered power cable with TE connectivity/AMP plug*
- * *1.78 meters (70in) PVC covered sensor cable with DB9 plug*
- * *Heater core sensor; 2x RTD100*
- * *Thermal cut-off device (bimetallic switch), set at 90°C*
- * *6mm (1/4") PFA SP300 Pillar inlet and outlet plumbing connections*
- * *3mm (1/8") PFA SP300 Pillar inlet and outlet plumbing connections*

The following equipment is recommended for safe operation of the SHC Inline Heater, and must be customer-supplied.

- * *Process temperature controller*
- * *Liquid level sensor*
- * *Proper high-voltage power fusing and electrical disconnect switch*
- * *Electrical earth leakage (ground fault) protection*
- * *Pump motor safety interlock circuit*


	The Process Technology SHC heater heats process fluid to temperatures as high as 80°C. However, the over-temperature protection circuit will allow the heater core to reach temperatures as high as 83°C. Consult the factory BEFORE attempting to heat flammable or combustible fluids.
---	---


INTRODUCTION (CONTINUED):

Chemical Compatibility:

Although fluoropolymer is resistant to most chemicals, there are some process chemistries with which the inline heater should not be used. These may include the following:

- Chemicals that degrade or decompose when heated.
- Chemicals that are flammable, explosive, or produce dangerous or irritating vapors when heated (Consult Process Technology).
- Halogenated solvents which attack the fluoropolymer material.

	<p>Do not use the SHC in line heater to heat incompatible chemistries. Incompatible materials will cause corrosion of the underlying stainless steel components, which may result in a heater failure.</p>
---	---

	<p>The Process Technology SHC heater heats process fluid to temperatures as high as 80°C. However, the over-temperature protection circuit will allow the heater core to reach temperatures as high as 83°C. Consult the factory BEFORE attempting to heat flammable or combustible fluids.</p>
--	--

INTRODUCTION (CONTINUED):

Performance Data:

The SHC series inline heaters are designed to be used in either single pass or multi-pass (recirculating) flow applications. An application is defined as single pass when the solution will enter the heating chamber only once and must be heated to the desired temperature when it exits the heater. A multi-pass application is one in which the solution will be recirculated through the process and returned to the chamber heater, and may take several cycles through the heater to reach the desired temperature.

Single Pass Flow Application:

For single pass applications, the SHC heater is designed to provide a specified temperature increase at a given flow rate. Table 1 shows the theoretical maximum temperature increase (ΔT) that can be achieved for continuous flow conditions from an 1400 Watt heater.

Note: Maximum operating temperature is 80°C. Values based on the specific heat/weight of water.

Heater Power, kilowatts (1400 watts)		
Flow	Maximum Temperature Rise (°C)	Flow
LPM		GPM
0.10	200	0.026
0.12	167	0.032
0.14	143	0.037
0.16	125	0.042
0.18	111	0.048
0.20	100	0.053
0.22	91	0.058
0.24	83	0.063
0.26	77	0.069
0.28	71	0.074
0.30	67	0.079

Table 1: Maximum Temperature Increase as a function of power vs. flow

INTRODUCTION (CONTINUED):

Multi-Pass Flow Application:

For a multi-pass application, the SHC heater will elevate and maintain the temperature of a fixed volume of solution as it is circulated. Use the following formula to estimate the heat-up time for a volume of fluid in a multi-pass system. For estimating purposes, the specific heat and weight of water are often used. However, more accurate results will be achieved using the properties of the specific solution.

$$\begin{array}{l} \text{Heat-up Time} \\ \text{(minutes)} \end{array} = \frac{\begin{array}{l} \text{Volume X Density X Temperature rise X Specific heat} \\ \text{(liters(L)) (kg/L) (°C) (J/kg x °C)} \end{array}}{1.4 \text{ kW X } 60,000}$$

This formula does not take into account any heat losses to the surrounding environment. Other factors that must be considered include heat losses through plumbing and exposed process tank surfaces, and the load placed on the heater by the introduction of cold products and chemicals into process tanks.

HEATER SPECIFICATIONS:

Product	SHC Series Inline Heater, model SHC-1.4-61RQH-R-0070
Approvals	CE, UL 499
Wattage	1400 watts
Voltage	480 VAC, single phase, 50/60Hz
Dimensions:	Refer to facilities print for specific heater dimensions
Wetted surfaces:	PFA
Operating temperatures: Process inlet Process outlet	Up to process outlet temperature Up to 80°C (176°F), depending upon operating conditions
Ambient Air Temperature	-30°C (-22°F) to 60°C (140°F)
Flow Rate Minimum Maximum	50 ml/min (0.013 gpm) 300 ml/min (0.079 gpm)
Pressure Rating at 60°C at 80°C	3.1 bar (45 psi) 2.7 bar (40 psi)
Core Sensors	(2) 100 ohm 3-wire RTDs
Thermal Cut-Off Device	bi-metallic switch, open at 90°C (194°F)
Housing Material	Flame-Retardant Polypropylene
Housing Purge (optional)	Nitrogen gas supplied 28-57 l/hr (1-2 scfh) at 13.8 kPA (2 psi) max

Table 2: Heater Specifications

FACILITY REQUIREMENTS:

Before installing the SHC inline heater confirm the facility requirements listed below.

Space Requirements:

The SHC inline heaters are designed to be installed within the tool or bench near the process tank assembly. Allow adequate space in the tool for mounting of the heater. Also provide space to make necessary power and plumbing connections to the heater.



The heater should be installed in an area free from excessive chemical or liquid exposure. The electrical junction area must not be submerged or exposed to excessive splashing or high pressure spray.

Location:

The SHC inline heater is designed to be located in areas where exposure to process chemistry is likely. The heater's external components are constructed of materials similar to the wetted components, but is not designed to be externally submerged.



Over-pressure protection should be installed to prevent pressures in excess of the maximum pressure at a specific temperature. Reference System Specifications or the heater's facilities print for additional information.

Plumbing Requirements:

The SHC inline heater plumbing connections include fluid inlet and outlet connections.

Plumbing must be compatible with process chemicals and temperatures.

Over-pressure protection should be installed to prevent pressures in excess of the maximum pressure at a specific temperature. A pulse-dampener must be used with a diaphragm pump. Refer to Table 2 for maximum pressure versus temperature information.



Do not exceed maximum temperature/pressure rating of this unit. Irreparable damage to the heater will result.

FACILITY REQUIREMENTS (Continued):

Mounting:

Ensure that the mounting location will adequately support the weight of the heater with attached plumbing and the fluid in the system. Heater may be mounted vertically or horizontally (Reference Figure 1).

NOTE: If optional housing purge/drain is used, heater must be oriented with the purge outlet/drain fitting at the lowest point.

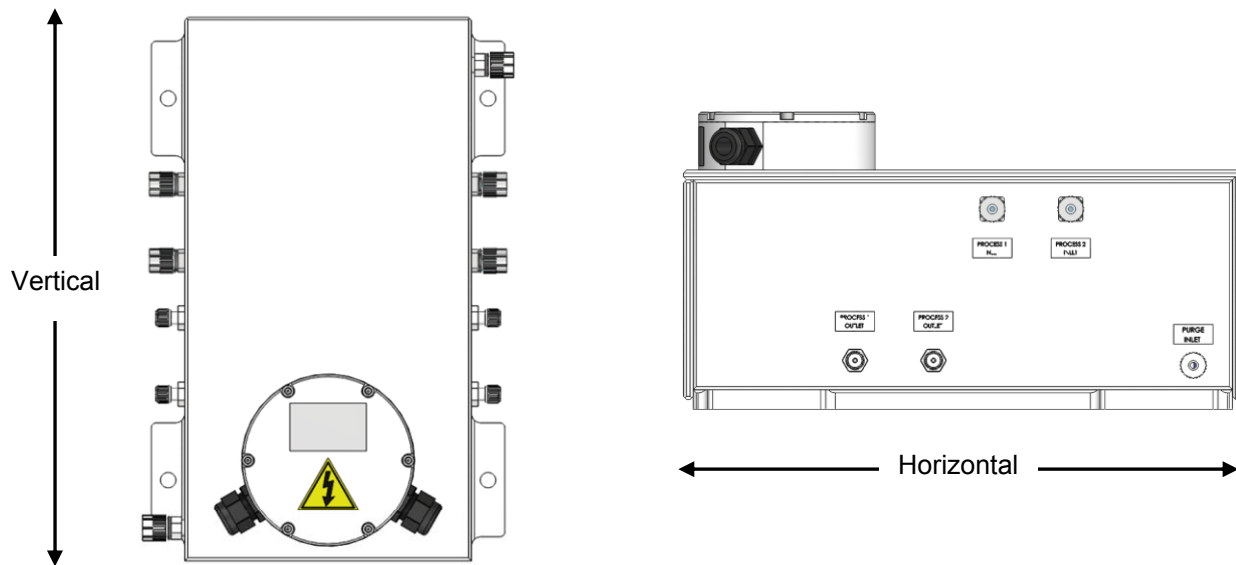


Figure 1: Mounting

Housing Purge/Drain Requirements (Optional):

The SHC inline heater is equipped with two housing fittings, which may be used (optional) to automate the detection method of an internal leak (Reference Figure 2).

Purge Inlet Fitting: Helps to expel liquid/vapors through the purge outlet/drain fitting.

Purge Outlet/Drain Fitting: Provides a means to route liquid/vapors to an external leak sensing device.



Do not exceed maximum pressure rating of the housing (Reference Table 2). Irreparable damage to the heater will result.

FACILITY REQUIREMENTS (Continued):

Electrical Requirements:

Separate wires are provide for heater power and the various safety sensors. Reference the heater's model number tag for the electrical power requirements of this heater. Verify that the electrical service is rated and fused for the required amperage draw.

Electrical disconnect devices and over-current protection must be selected in accordance with IEC-60364-4.

Ensure protective measures used for isolation and switching comply with IEC 60364-4.

Over-current Protection: If using circuit breakers, ensure use of a circuit breaker suitable for isolation and in compliance with IEC 60947-2. If using fuses, select in accordance with IEC 60269-2 combined with a magnetic contactor in accordance with IEC 60947-4-1.

Ensure protective measures for over-current, short-circuit and ground-fault conditions are in accordance with IEC 60364-4-43 and IEC 60364-4-473.




Do not exceed the rated voltage. Irreparable damage to the heater will result.

NOTE: Ensure electrical power fusing and disconnects meet local jurisdictional requirements. Fuse ratings noted in this document are for reference only. Ensure external electrical components comply with local requirements before operating this unit.

INSTALLATION:

Before installation, carefully read this entire section.

	<ol style="list-style-type: none">1. NEVER exceed recommended temperature and pressure ratings.2. Turn power off at the main disconnect before performing any service.3. Lock and Tag the disconnect to prevent the equipment from accidentally being energized during servicing.4. Read all instructions carefully and understand equipment before operating. Consult factory for assistance if needed.
---	--

Uncrating and Inspection:

- 1) Remove the Heater assembly from its shipping container.
- 2) Remove box containing all support equipment.
- 3) Remove any protective packaging material and discard.
- 4) Inspect unit for any apparent physical damage.
- 5) Check component list for all parts.

Component Identification:

The SHC inline heater includes the following items:

- 1) Heater Assembly: Consists of PFA fluid path within a flame retardant polypropylene housing.

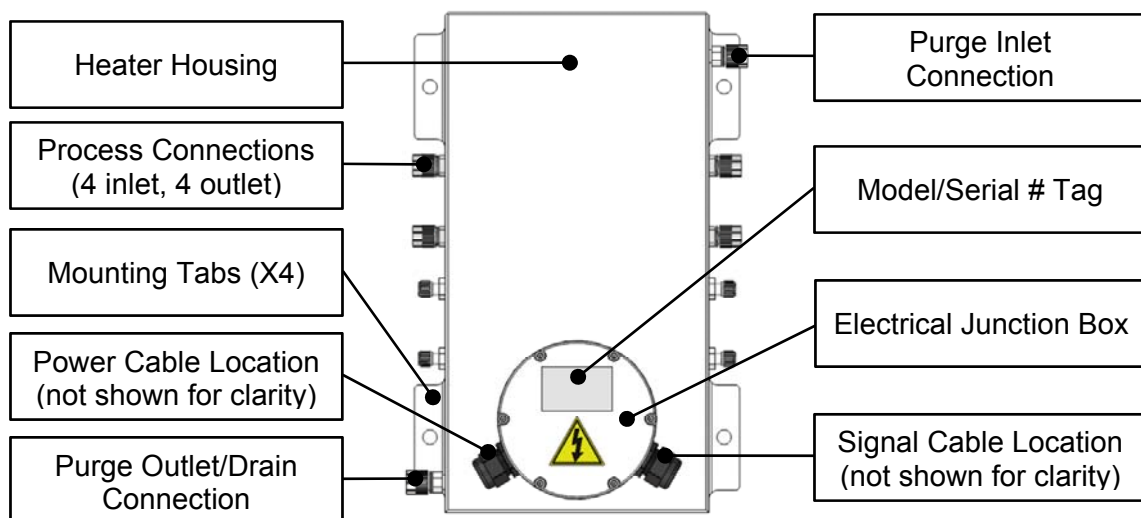


Figure 2: Component Identification

INSTALLATION (CONTINUED):

Process Fluid Inlet and Outlet Connections:

- 1) Remove the protective plastic plugs from the inlet and outlet connections of the heater chamber assembly.
- 2) Connect appropriate fittings to the Inlet and Outlet of the heater chamber assembly. Refer to the fitting manufacturer's specifications and instructions for proper installation requirements.

NOTE: For the Nippon Pillar fittings it is recommended to use a gap gauge (W1) to verify proper tightening of the nut. Gap gauges are available from Nippon Pillar Packing.

Electrical Connections:

The SHC inline heater has separate power and sensor cable connections.

Main Power:

The Power Cable consist of (2) two black power leads, and (1) one green ground lead, which are factory wired to a customer specified TE connectivity/AMP plug connector.

- 1) Refer to the model number label for the power requirements for this heater.
- 2) Fuse the incoming power supply lines for the rated amperage using an approved electrical disconnect. The electrical disconnect must meet the following minimum requirements:
 - Appropriate voltage and amperage ratings for the specific heating system. Verify that all fused electrical disconnects meet jurisdictional requirements.
 - For safety of service and maintenance personnel, this electrical disconnect must be located within sight of the equipment.
- 3) Ensure that all services are off before making connections (electrical, liquids, and gas). Lockout and Tagout as appropriate.



All electrical connections and safety devices must comply with local electrical code guidelines. Use only approved and properly rated wire, conduit and connectors.

- 4) Connect Power connector to the mating receptacle (customer supplied). Refer to electrical schematic 62-0072 for details.

Note: the use of an electrical disconnect device is required in the customer supplied controller, which must have the proper electrical rating necessary for the equipment.



Check all connections before applying power.

INSTALLATION (CONTINUED):

Signal Cable:

The Signal Cable consists of the following:

- Core sensors; two each (one primary, one backup), same type.
- Thermal cutoff (TCO) device
- Customer specified DB9 plug connector/housing

1) Connect Signal connector to the mating receptacle (customer supplied). Refer to electrical schematic 62-0072 for details.

Heater Core Sensors:

The SHC inline heater is supplied with redundant core temperature sensors. These sensors must be installed into a customer-supplied control package to protect the equipment from accidental damage and to ensure operator safety. Refer to the facilities and electrical prints for the specific temperature sensors supplied with the heater.

NOTE: Failure to use the supplied sensors for their intended purposes may void all or part of the equipment warranty. Consult factory for technical assistance.

Heater Element TCO (Thermal Cutoff):

The Heater Element TCO is a bimetallic switch that opens when it reaches a preset temperature. This is a resettable device which must be connected to interrupt the operation of the control circuit if it is activated by an element over-temperature condition.



Do not connect the TCO in series with the heating element/main load. The TCO is designed to be wired into the heater's safety control circuit.

Protection of the circuit shall be done with a fuse, according to IEC or EN 60691 or a circuit breaker according to IEC 60947-2.

SAFETY FEATURES:

Safety System Network:

The SHC inline heater is supplied without a Temperature Control package. Certain safety interlocks must be incorporated into the control package to prevent damage to the heater and ensure the safety of the operator. Each interlock circuit monitors a critical operating parameter of the heater. The control system is designed so that if a "fault condition" is detected by one of the sensors, the power to the heating element is disengaged. The shutdown mechanism may be momentary or latching; refer to table below.

Safety device	Operation	Type of Shutdown
Pump Interlock	Monitors condition of pump, disrupts power to heater when pump is not in operation.	latching
Electrical Safety Interlock	Monitors for over-current, short-circuit and ground-fault conditions, disrupts power to the heater when fault condition is detected	latching
Process Temperature Control Device	Monitors temperature of fluid, disrupts power to heater when temperature rises above setpoint.	momentary
Process Over-Temperature Control Device	Monitors temperature of fluid, disrupts power to heater when temperature rises above setpoint.	momentary
Heater Core Temperature Control Device	Monitors temperature of heater core, disrupts power to heater when temperature rises above setpoint.	momentary
Heater Element TCO	Monitors temperature of heating element, disrupts power to heater when temperature rises above melt point of TCO.	latching

Table 3: Safety System Network

OPERATION:



During operation, the surface temperature of the heater may exceed 40°C. Avoid contact- serious personal injury may result.

Start Up Procedure:

- 1) Start process fluid flow. Allow solution to flow for several minutes to remove any air from the heating chamber.
- 2) Turn on the main power to the system.
- 3) Turn on the control module.
- 4) Verify proper reading of the process temperature.
- 5) Engage the control system's safety relay, if applicable.
- 6) Turn on the heater.

Shut-Down Procedure:



The heater chamber may contain process solution or residue. This material should be handled with the same care and precautions as any process solution.

- 1) Turn off electrical power to the heater.
- 2) Allow heater to cool. The Inline heater may be damaged if the heater is allowed to operate in air or if residual heat is not allowed to dissipate before draining. Before the chamber is drained, the outlet temperature must be allowed to cool to within 1°C of the inlet temperature. Then, wait an additional 10 minutes.
- 3) Turn OFF process fluid flow through the Heater.
- 4) Turn OFF process controller.
- 5) Turn OFF Main Electrical Power.
- 6) For extended shut down periods, drain the system.

OPERATION (CONTINUED):

Cleaning:

This Process Technology SHC inline heater was cleaned before shipment. However, cleaning is typically required to remove any contaminants remaining after installation. The times required for cleaning of the system are dependent on DI water quality, flow rates, and installation techniques, and will vary. Additional steps may be required for some applications.

- 1) Operate the SHC inline heater at ambient temperature for several hours, overnight if possible, at the maximum flow rate of 300 ml/min (0.079 gpm).



Small amounts of process chemistry may remain in the unit after draining. The unit should be flushed with hot water then drained several times to eliminate any residual chemistry.

Maintenance:

Preventative Maintenance of the Inline Heater Chamber:

The Process Technology SHC inline heater requires minimal preventive maintenance.

The process inlet/outlet fittings should be checked for leaks every Six Months.

Service:

Process Technology supports its product line with a strong technical support and field service program. If your SHC heater fails to perform properly, follow the outlined steps for resolution.

- 1) Verify connections and program parameters.
- 2) Contact the Process Technology Technical Service Group. When placing this call, please have available the model number and serial number of the unit (located on the system tag), information about the application of the equipment, and information regarding the chemical constituents of the process fluid. The Service Technician will evaluate the situation and determine a course of action for troubleshooting and repair.
- 3) If the Technician determines that the unit should be returned to the factory for evaluation, a Returned Materials Authorization (RMA) Number will be issued. A return will not be accepted without prior authorization.

To protect the safety of Process Technology's workers and any others that may come in contact with the SHC in the course of transport, evaluation, and repair, Process Technology requires that these practices be followed in returning the equipment to the factory:

- 1) Rinse the equipment until it is free of any chemical residuals. This is required for safe transport and handling of the equipment.
- 2) Wrap the unit in plastic and secure. Make sure that it does not leak. (Process Technology is not responsible for damage caused by leakage during shipping.)
- 3) Carefully package the unit for shipment.
- 4) Indicate the type of chemical that was in use at the time of failure. Include this information on the packing slip or place the information on the outside of the box. Process Technology will not risk exposure of its personnel to unknown chemicals. A return will not be evaluated until chemical information is received.

<p>NOTE: Because of the configuration of the heating coils within the unit, it is possible that process fluid residues may remain even after thorough rinsing. Chemical information must be included even when a unit is believed to be clean so that Process Technology may protect its workers from exposure to these residues.</p>
--

- 5) Clearly mark the outside of the box with the RMA number.
- 6) Ship the component prepaid to Process Technology.

On receipt of a returned unit, Process Technology will follow these steps:

- 1) The equipment will be carefully unpacked, inspected and cleaned, and an evaluation will be done.
- 2) A Process Technology technician will contact you with information regarding the scope of work to be performed, the cost, and the amount of time needed.
- 3) After a purchase order and authorization to perform the repair are received, the repairs will be completed and the unit returned.

WARRANTY:

All PROCESS TECHNOLOGY equipment, heaters and controls have been carefully inspected before shipping and are warranted to be free from defects in workmanship and materials for a period of one year from date of purchase on a pro-rated basis. At its option, PROCESS TECHNOLOGY will repair or replace any defects that are exhibited under proper and normal use. PROCESS TECHNOLOGY disclaims any responsibility for misuse, misapplication, negligence or improper installation of equipment, tempering or other operating conditions that are beyond its control (such as excessively high or low purge gas supply pressure). PROCESS TECHNOLOGY makes no warranty or representation regarding the fitness for use or the application of its products by the customer.

All products and components not manufactured by PROCESS TECHNOLOGY will carry the original manufacturer's warranty, copies of which are available upon request. PROCESS TECHNOLOGY makes no warranty or representation, expressed or implied, with respect to the products not manufactured by PROCESS TECHNOLOGY.

Products must be installed and maintained in accordance with PROCESS TECHNOLOGY instructions. PROCESS TECHNOLOGY is not liable for labor costs incurred in removal, reinstallation, or unauthorized repair of the product or for damage of any type including incidental or consequential damage.

PROCESS TECHNOLOGY neither assumes nor authorizes any representative of PROCESS TECHNOLOGY or any other person to assume for it any other liabilities in connection with the sale of the products. This warranty may not be verbally changed or modified by any representative of PROCESS TECHNOLOGY.

Shipping Damages:

Claims against freight carriers for damage in transit must be filed by the customer at the time of delivery or as soon as possible.

Returns:

No product shall be returned to PROCESS TECHNOLOGY without first obtaining a return material authorization (RMA) number from a PROCESS TECHNOLOGY representative. All returns must be freight prepaid. Freight collect or shipments without authorization will be refused.

Information:


PROCESS TECHNOLOGY will endeavor to furnish such advice as it may be able to supply with reference to the use by buyer of any material purchased, but PROCESS TECHNOLOGY makes no guarantees and assumes no obligation or liability for advice given verbally or in print or the results obtained. Buyer assumes all risk and liability that may result from the use of any material, whether used by itself or in combination with other products. No suggestion for product use shall be construed as a recommendation for its use in infringement on any existing patent.

Conflict Between Documents:

Acceptance of this offer is expressly conditioned upon agreement to all terms and conditions contained herein. In the event of a conflict between the terms and conditions of purchaser's purchase order, and PROCESS TECHNOLOGY's terms and conditions, proposal or offer, the latter shall govern.

REV	BY	DATE	DESCRIPTION
5	MJM	04/12/17	UPDATED RTD DESIGN PER LAM PR 647206 AND CMR 142.
4	TRJ	07/27/15	CHANGED PROCESS LABELS PER DCR 304
3	DLS	04/23/15	ADDED HOUSING PURGE/DRAIN OPTION DETAILS

- NOTES:**
- HEATER SPECIFICATIONS: 1400W @ 480V, 1PH, 50/60Hz, 2.9 FLA @ 480V.
 - THERMAL CUT-OFF DEVICE (BIMETALLIC SWITCH) IS RATED FOR 2.6A @ 120VAC OR 4A @ 24 VDC AND OPENS AT 194°F [90°C].
 - TEMPERATURE SENSORS (2 EA) ARE 100 OHM, 3-WIRE RTDs.
 - ALL WETTED COMPONENTS ARE PFA.
 - MAXIMUM PRESSURE RATING IS 45 PSI [3.1 BAR] AT 60°C AND 40 PSI [2.7 BAR] AT 80°C.
 - EXTERNAL HOUSING MATERIAL IS FLAME-RETARDANT POLYPROPYLENE.
 - HEATER CAN BE MOUNTED VERTICALLY OR HORIZONTALLY. IF PURGE/DRAIN OPTION USED, HEATER MUST BE ORIENTED WITH THE PURGE OUTLET / DRAIN FITTING AT THE LOWEST POINT.
 - APPROXIMATE WEIGHT IS 28 lbs [12.7 kg].
 - PROCESS INLET CONNECTIONS ARE 1/4" NIPPON PILLAR SUPER 300 FITTINGS.
 - PROCESS OUTLET CONNECTIONS ARE 1/8" NIPPON PILLAR SUPER 300 FITTINGS.
 - IF UNIT IS PURGED, PURGE OUTLET MUST BE CONNECTED TO THE PROPER CHEMICAL DRAIN DEPENDING ON PROCESS CHEMISTRY USED.
 - PURGE IN: N2 FLOW 1-2 SCFH [28-57 LPH], MAX PURGE INLET PRESSURE OF 2 PSIG [13.8 kPa]


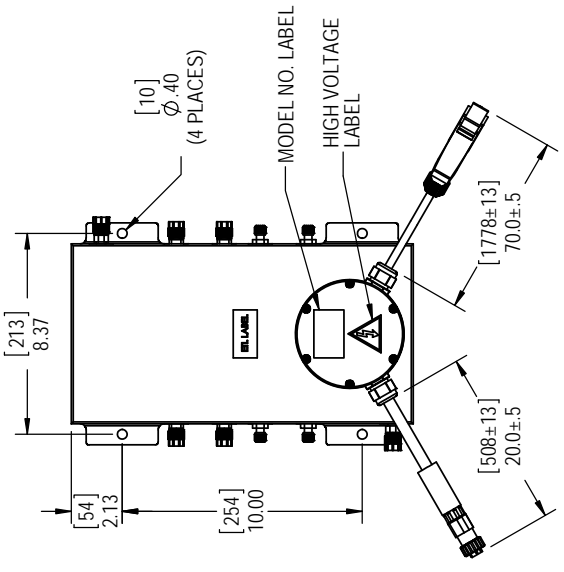


POWER CABLE: Ø .340 [9] [14AWG, GRAY PVC, 90C, UL RATED]

SIGNAL CABLE: Ø .310 [7] [20AWG, GRAY PVC, 105C, UL RATED]

POWER CONNECTION TE CONNECTIVITY / AMP PLUG CONNECTOR (PART # 788153-2)

SIGNAL CONNECTION DB9 PLUG CONNECTOR WITH PHOENIX CONTACT HOUSING (PART # 1688353)

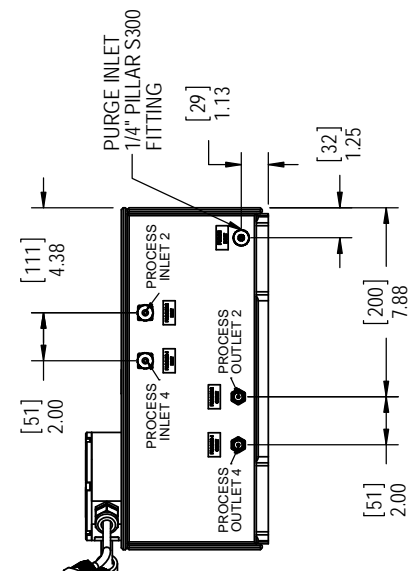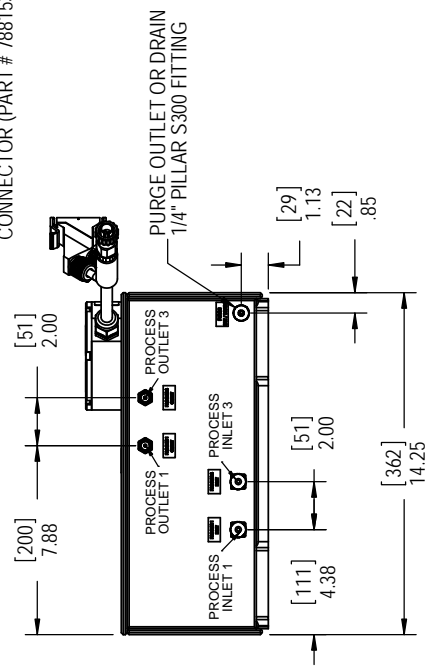

PROCESS TECHNOLOGY®

7010 LINDSAY DR, MENTOR OH USA
(P) 440-974-1300 (F) 440-974-9561
WWW.PROCESS-TECHNOLOGY.COM


ITEM: UNLESS NOTED TOLERANCES ARE:
0.00 = .06
0.000 = .030
ANGLES = 1°
[mm]
INCHES
SECONDARY UNIT FOR REFERENCE ONLY
3rd ANGLE DIMENSIONING AND PROJECTION
INTERPRET GEOMETRIC DIMENSIONING AND TOLERANCING PER ASME Y14.5M

DRAWN BY: DLS
DATE: 12/04/14
DESCRIPTION: FACILITIES: SHC-1.4-61RQH-R-0070
CONTROLLED DOCUMENT LOCATIONS:
APPROVAL INFORMATION:
BY: MJM
DATE: 04/12/17

THIS DRAWING IS THE PROPERTY OF PROCESS TECHNOLOGY. IT CONTAINS CONFIDENTIAL INFORMATION AND MAY NOT BE REPRODUCED IN ANY WAY WITHOUT THE PERMISSION OF PROCESS TECHNOLOGY.

CONNECTOR: TE CONNECTIVITY
788153-2



PINS: TE CONNECTIVITY
66361-4

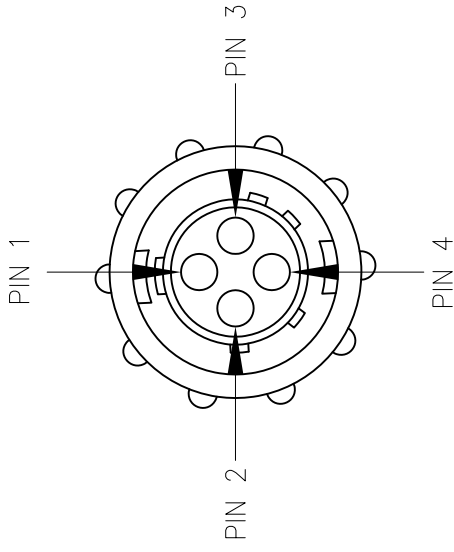

HOUSING: PHOENIX CONTACT
VS-09-T-2M16


PLUG: TE CONNECTIVITY
205204-4

PINS: TE CONNECTIVITY
6-66506-1

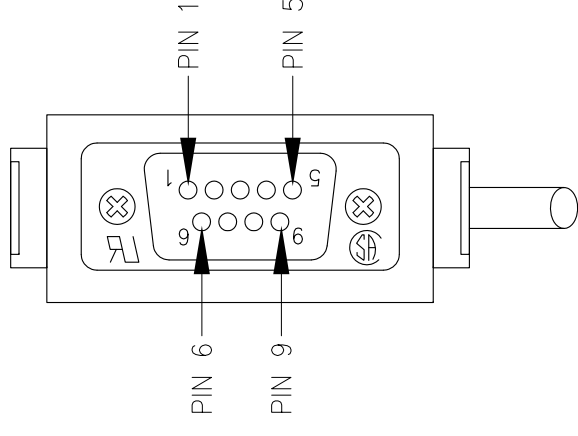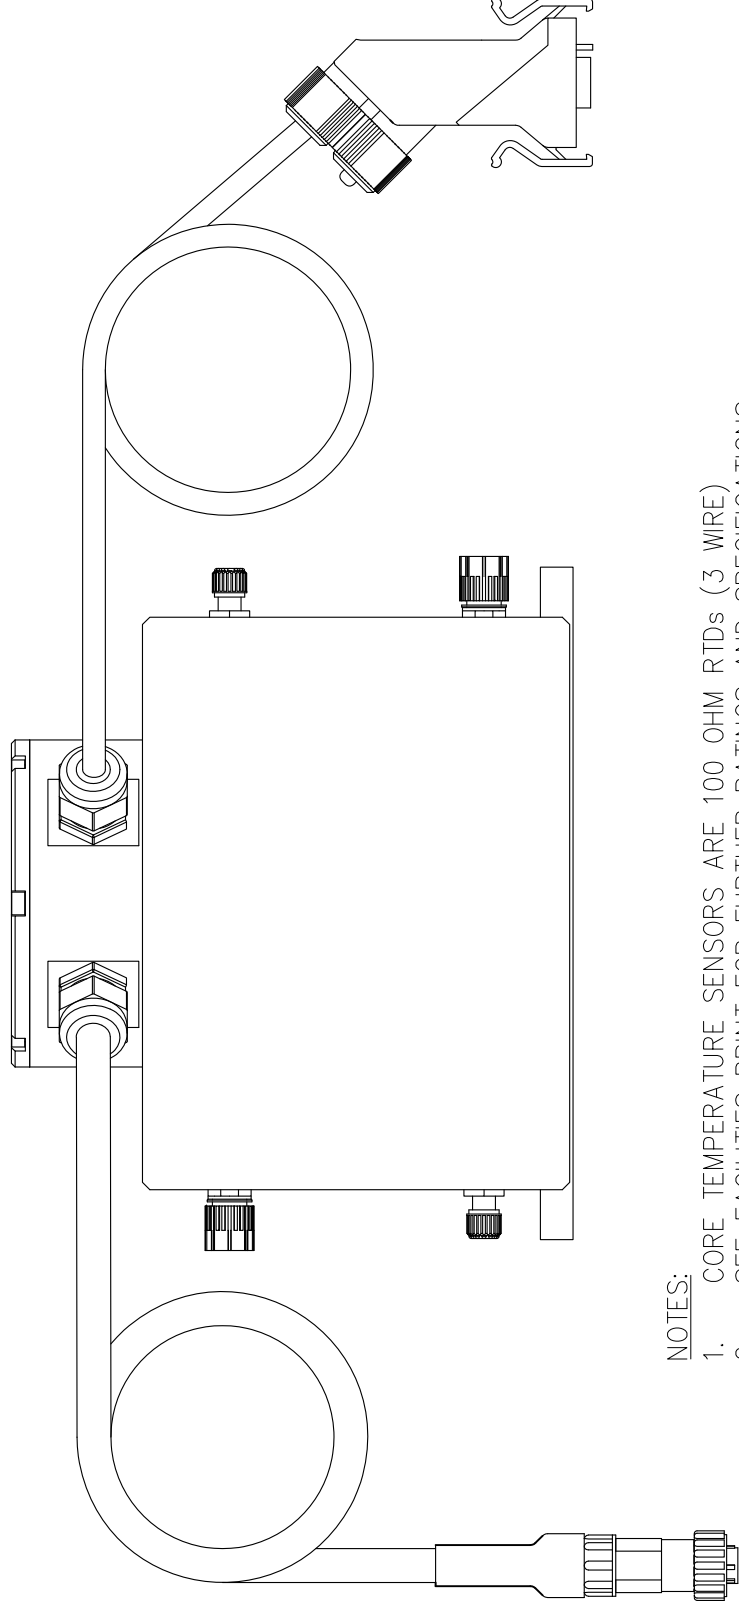


NOTES:

1. CORE TEMPERATURE SENSORS ARE 100 OHM RTDs (3 WIRE)
2. SEE FACILITIES PRINT FOR FURTHER RATINGS AND SPECIFICATIONS
3. SINGLE PHASE VOLTAGE IS REQUIRED FOR OPERATION OF THIS UNIT

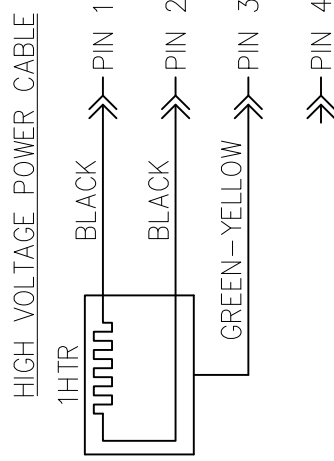

LOW VOLTAGE SIGNAL CABLE

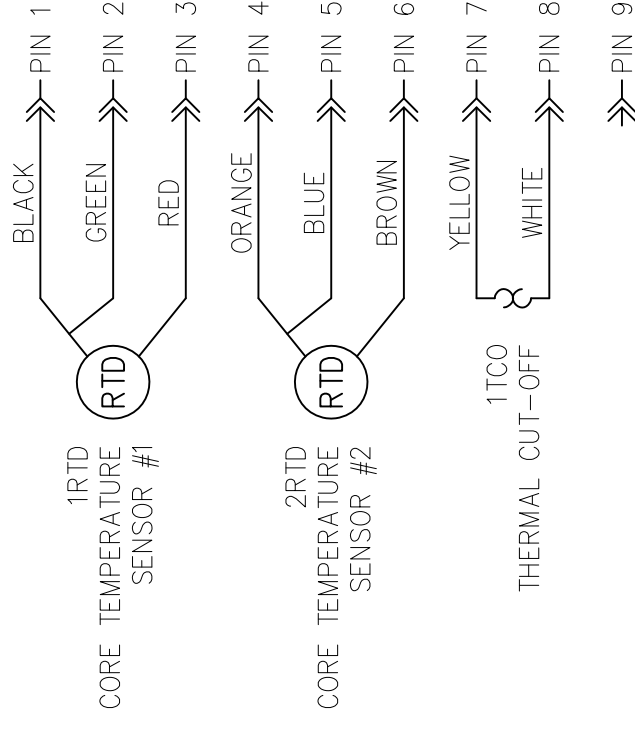


CONTROLLED DOCUMENT LOCATION:

ITEM:	-		
CUSTOMER No:	-		
2	SPL	1/15/16	ADDED -0108
1	DLS	5/19/15	CHANGED DESCRIPTION TO ELECTRICAL SCHEMATICS
REV. BY	DATE	DESCRIPTION OF CHANGE	

THIS DRAWING IS FOR REFERENCE ONLY AND IS SUBJECT TO CHANGE WITHOUT NOTICE. IT CONTAINS CONFIDENTIAL INFORMATION WHICH IS THE PROPERTY OF PROCESS TECHNOLOGY, AND MAY NOT BE REPRODUCED OR USED IN ANY WAY WITHOUT THE EXPRESSED WRITTEN CONSENT OF PROCESS TECHNOLOGY.

UNLESS NOTED TOLERANCES ARE:
0.00 = ±.02
0.000 = ±.010
ANGLES = ±1°

INCHES (mm)

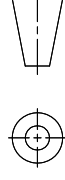

3rd ANGLE PROJECTION

PROCESS TECHNOLOGY®

7010 LINDSAY DR, MENTOR OH USA
(P) 440-974-1300 (F) 440-974-9561
WWW.PROCESS-TECHNOLOGY.COM

DRAWN BY: RJF DATE: 12/10/14 DESIGNER: DATE

DESCRIPTION: ELECTRICAL SCHEMATICS

SHC-1-1-0070/-0108

APPROVED BY: B SCALE: NONE DRAWING No. 62-0072-2
1 OF 1